






Saiga T6 Intrafuse Rifle System


1. **Make sure your rifle is unloaded and ensure that there is no ammunition in the chamber.**
2. **Remove the receiver cover by pressing in the recoil assembly tab. Once the cover is off, remove the recoil spring. Remove the three screws holding the stock in place (two on top, one on bottom). Insert the TAPCO T6 Collapsible Stock.**

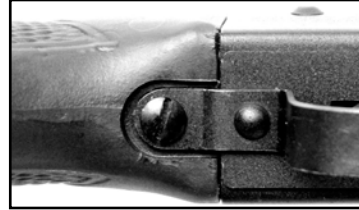

3. **While wearing safety glasses use the supplied 3/32" drill bit to create three pilot holes approximately 1/2" deep. Using the supplied 3 short screws, secure the stock to the receiver. Use a light oil to ease the installation of all screws.**

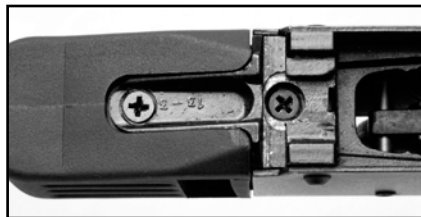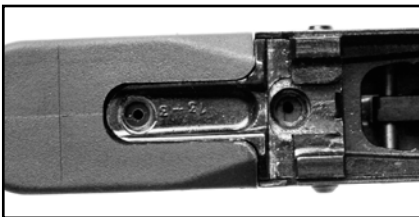

4. **Use the "self tapping" 2.25" hex head screw (3/8 socket) to secure the grip. The highest and most rearward hole in the grip will be used.**

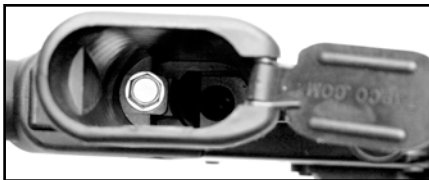

5. **Reassemble the recoil assembly and top cover. The TAPCO sling adaptor is designed to work on either side of the Saiga T6 collapsible stock. Tighten the provided long screw until both sides of the sling adaptor are flush with the stock. Over tightening the screw can cause damage to the adaptor.**



6. **Perform a function check on your weapon to ensure that the installation was successful.**

